



TUFF BULLBARS AUSTRALIA
6 Tews Ct, (PO Box 1977)
TOOWOOMBA QLD 4350
Phone: 1300 BE TUFF
(1300 23 8833)
Fax: (07) 4633 1236



sales@tuffbullbars.com.au
marketing@tuffbullbars.com.au
feedback@tuffbullbars.com.au
www.tuffbullbars.com.au

BRUSH RAIL Fitting instructions to fit TUFF Range Brush Rails to HOLDEN COLORADO RG

Estimated fit time: 1 hours



Call 1300 BE TUFF (1300 23 8833) for assistance



Read Fitting instructions carefully before fitting product to vehicle

- ❖ When installed in accordance with these instructions, the front protection bar does not affect operation of the SRS airbag. This product has been tested for Air Bag Compatibility and therefore the mounting system **MUST NOT** be modified
- ❖ This product must be installed exactly as per these instructions using only the parts supplied
- ❖ In the event of damage to any bullbar component, contact the tuff team ASAP
- ❖ Do not use this product for any vehicle make or model, other than those specified by tuff
- ❖ Do not remove any labels from the bullbar and/or brush rails & steps
- ❖ Bullbar installations should be done by a qualified person and it is the responsibility of this person to ensure correct fitment

Tools suggested for fitment


16mm Socket and extension
Spanners
Ratchet

Bolt and Bracket kit for fitment

S/CAB	D/CAB	Items sent	Items received (your check list)
8	12	12mm x 140mm threaded rod	
16	24	12mm normal nuts	
16	24	12mm spring washers	
12	18	40mm x 10mm bolts	
14	20	10mm nylock nuts	
28	40	10mm flat washers	
2	2	Button head Bolts (60mm or 70mm depending on the size of the rails)	
4	4	190mm backing plates	
	2	215mm backing plates	
4	6	Chassis brackets	
4	6	Extension brackets	
16	24	12mm Flat washers	



Read through the fitting instructions and pictures below or visit [\[redacted\]](#) for a fitting instruction Slide show

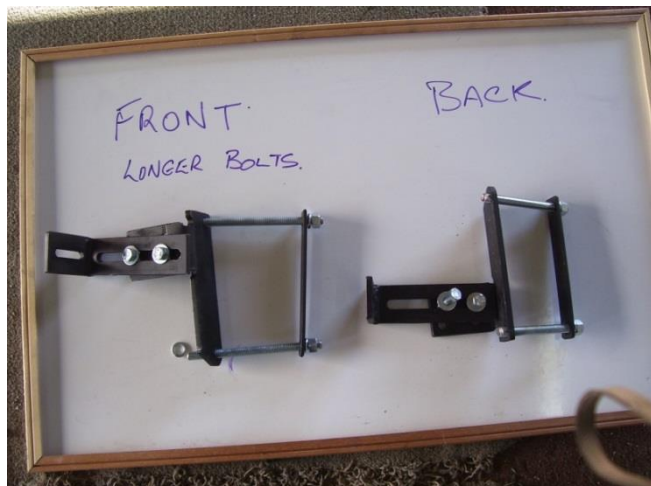

Please note: The single cab has x2 sets of chassis brackets, the dual cab has x3 sets of brackets

The front bracket is similar to the others but has longer threaded rods (170mm)

All the other brackets are the same

On a single cab, the brackets are bolted to the chassis respectively from the front mud flap

On a dual cab, the brackets are bolted to the chassis approximately 350mm/1100mm/1900mm respectively from the front mud flap

Attach the L shaped slotted brackets loosely to chassis brackets – brackets point backwards as shown in the picture



The Rail bracket is attached to angle iron under step (back) using 40 x 10mm bolt



Align the rail by making sure it follows the line of the cab – step level (use a jack to hold step up)

Fit bolts from the step to slotted L brackets, then tighten & align all brackets



Slide the brush rails onto spigot/spigots on Bullbar



Drill an 11mm hole vertically through top of rail & spigot & insert bolt & tighten to fasten rail to spigot



Fix the rail to spigot using 10mm bolt & nut supplied in kit



Job completed!



Please don't hesitate to call us on **1300 BE TUFF** (1300 23 88 33) if you have any problems with fitting

We are always looking for ways to improve our fitting instructions and encourage you to give us feedback on this. Send your feedback to

marketing@tuffbullbars.com.au

Best regards the TUFF TEAM! 😊