

TUFF BULLBARS AUSTRALIA

6 Tews Ct, (PO Box 1977)
TOOWOOMBA QLD 4350
Phone: 1300 BE TUFF
(1300 23 8833)
Fax: (07) 4633 1236



sales@tuffbullbars.com.au
marketing@tuffbullbars.com.au
feedback@tuffbullbars.com.au
www.tuffbullbars.com.au

BRUSHRAIL / SIDE STEPS Fitting instructions to NISSAN NP300 NAVARA

Estimated fit time: 1 hour



Call 1300 BE TUFF (1300 23 8833) for assistance



Read Fitting instructions carefully before fitting product to vehicle

- ❖ When installed in accordance with these instructions, the front protection bar does not affect operation of the SRS airbag. This product has been tested for Air Bag Compatibility and therefore the mounting system **MUST NOT** be modified
- ❖ This product must be installed exactly as per these instructions using only the parts supplied
- ❖ In the event of damage to any bullbar component, contact the tuff team ASAP
- ❖ Do not use this product for any vehicle make or model, other than those specified by tuff
- ❖ Do not remove any labels from the bullbar and/or brush rails & steps
- ❖ Bullbar installations should be done by a qualified person and it is the responsibility of this person to ensure correct fitment

Tools suggested for fitment

Phillips Screw Driver
Flat Blade Screw Driver
10mm Socket or spanner
Ratchet
Jack

Bolt and Bracket kit for fitment

Scab	Dcab	Items sent	Items received (your check list)
8	12	12mm x 120mm threaded rod	
12	18	12mm spring washers	
12	18	12mm normal nuts	
12	18	40mm x 10mm bolts	
28	40	10mm flat washers	
14	20	10mm nylock nuts	
6	2	Spigot bolts (10mm bolts)	
4	6	Chassis brackets	
4	6	Extension brackets	

Option: Bolts on spigots

Double Rails = 12 x 10mm bolts, nuts and washers

Single Rails = 6 x 10mm bolts, nuts and washers



Read through the fitting instructions and pictures below or visit <https://youtu.be/y05cbbzvJ5o> for a fitting instruction video



Prepare the vehicle ready for fitment:


First lay out all the brackets, making sure you have all the parts and are ready to install



Position the back of the bracket through the chassis



Position the front of the brackets on by using the flat spring washers and nuts

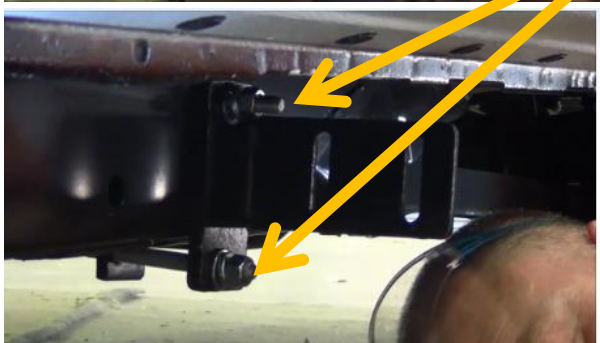

**Cont. Prepare the vehicle ready for fitment:**

Continue with the back bracket and middle if applicable (for Dual cab vehicles) repeating the above steps



Tighten all nuts with a ratchet or spanner



Position the L shaped slotted brackets to the chassis brackets



Position the L shaped slotted brackets backwards



Slide the brushrail / side step onto the bullbar

TIP: Spraying CRC on the bullbar spigot can help when sliding the brushrails on



Fitting the Brushrails / Side steps:

Using a jack or similar device, support the side steps when positioning them onto the brushrail brackets



Secure the brushrail / side step to the brushrail brackets using the nylock nuts and washers



Tighten all bolts with a ratchet and spanner



Brushrail and side steps should now be secured to the chassis



Cont. Fitting the Brushrails / Side steps:

Drill an 11mm hole vertically through the top of the rail and spigot and insert bolt – using +/-10mm bolts, nuts and washers, tighten to fasten and secure



Job completed!



PLEASE DON'T HESITATE TO CALL US ON **1300 BE TUFF** (1300 23 88 33) IF YOU
HAVE ANY PROBLEMS WITH FITTING

BEST REGARDS THE TUFF TEAM! 😊