



FITTING INSTRUCTIONS FOR TOYOTA LAND CRUISER 70 SERIES BRUSH RAILS

TUFF BULLBARS AUSTRALIA,
6 Tews Ct , (P.O. Box 1977)
Torrington,
Toowoomba,
Queensland 4350,
AUSTRALIA



Ph: **1300 BE TUFF** (1300 23 88 33)
Fax: 07 4633 1236
sales@tuffbullbars.com.au
admin@tuffbullbars.com.au
feedback@tuffbullbars.com.au
www.tuffbullbars.com.au

TOYOTA LAND CRUISER 70 SERIES BRUSH RAILS - BOLT KIT

D/CAB	S/CAB	
12	7	120mm x 12mm threaded rod
24	15	12mm normal nuts
24	15	12mm spring washers
18	12	40mm x 10mm bolts
40	28	10mm flat washers
20	14	10mm Nylock Nuts
-	1	190mm Backing Plates (welded)
6	3	190mm Backing Plates
2	2	Spigot Bolts (10mm bolts)
6	4	Chassis brackets
6	4	Extension Brackets
		Options: Bolt On Spigots Double Rails =12 x 10mm bolts & nuts & washers Single Rails =6 x 10mm bolts & nuts & washers

www.tuffbullbars.com.au

1300 BE TUFF

TUFF BY NAME * TUFF BY NATURE

**AUSTRALIA'S LEADING BULLBAR
MANUFACTURER**





FITTING INSTRUCTIONS FOR TOYOTA LAND CRUISER 70 SERIES BRUSH RAILS




Lay Brackets Ready - 2 per Side
Each Bracket has a 2 Holed Backing Plate & 2
Threaded Rods

→ Front Bracket (Passenger Side)

→ Back/Exhaust Bracket (Passenger Side)

Important: Start With Passenger Side of Vehicle

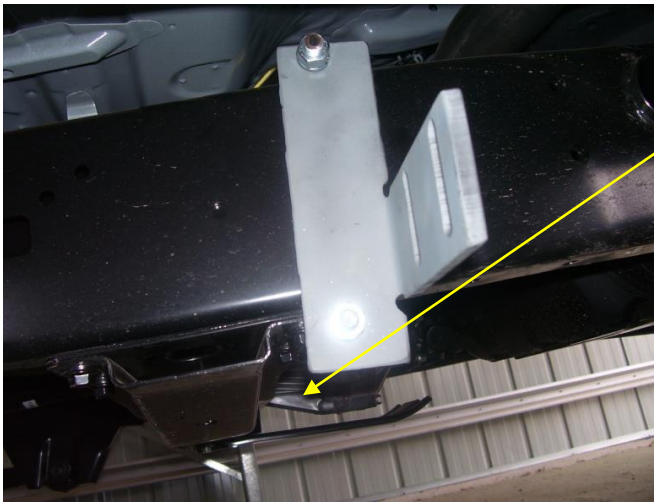

→ Front Bracket is Positioned about 10mm Back From
Gearbox Cross Member

Tighten in Place



Attach L Shaped Slotted Brackets Loosely To
Chassis Brackets 10x40mm Bolts,
Nuts & Washers

→ Back Bracket Point Down (Has a Welded Corner)

→ Front Bracket Points Backwards

Drivers Side Brackets Fit Similar Positions.

**PLEASE NOTE: Back Bracket may be a different
shape**



FITTING INSTRUCTIONS FOR TOYOTA LAND CRUISER 70 SERIES BRUSH RAILS



Slide Brush Rails onto Spigots on Bullbar

Align Rail – Step Level (Use a Jack To Hold Step Up)



Fit Bolts From Step to Slotted L Brackets, Tighten & Align All Brackets

10x40mm Nuts, Bolts & Washers



Make Sure Step is Level and Follows Vehicle Lines

Tighten all Brackets



FITTING INSTRUCTIONS FOR TOYOTA LAND CRUISER 70 SERIES BRUSH RAILS



Drill an 11mm Hole Vertically Through Top of Rail & Spigot & Insert Bolt & Tighten To Fasten Rail To Spigot. Using 10mm Bolts, Nuts & Washers



PLEASE DON'T HESITATE TO CALL US ON **1300 BE TUFF** (1300 23 88 33) IF YOU HAVE ANY PROBLEMS WITH FITTING

BEST REGARDS, THE TUFF TEAM! 😊